



by **HFCL**

ion4i
Access Point

QUICK START GUIDE



ANYWHERE EVERYWHERE



Thank you for choosing ion4i Wireless Access Point with 2x2:2 Multi-User MIMO and 802.11ac Wave 2 compliance.

Packaging Content

1. ion4i Wireless Access Point
2. Quick Start Guide
3. Mounting Bracket


ion4i
Access Point



Mounting Bracket



Product Overview

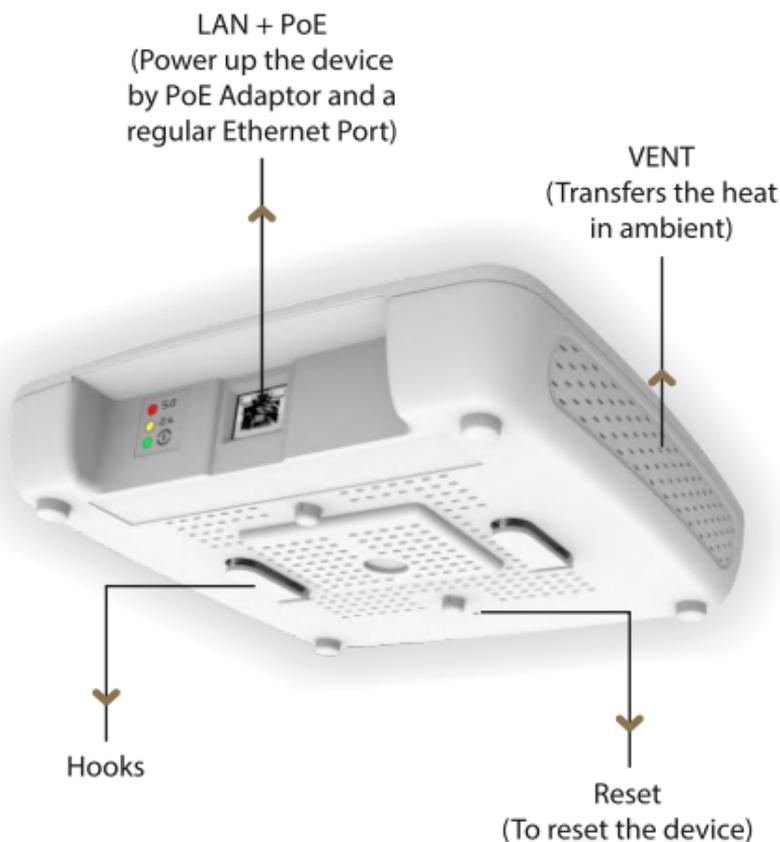

Mounting of ion4i Access Point


1. Place the Mounting Bracket which came with the package on a wall or ceiling and mark holes with a marker where you will insert the screws. Drill holes in the marked points and insert the plastic wall anchors.

2. Use the supplied screws and attach the mounting bracket to the wall.

Note: Make sure that the mounting bracket is tightly installed before mounting the Access Point on the wall or ceiling.


Mounting
Bracket

Wall/
Ceiling

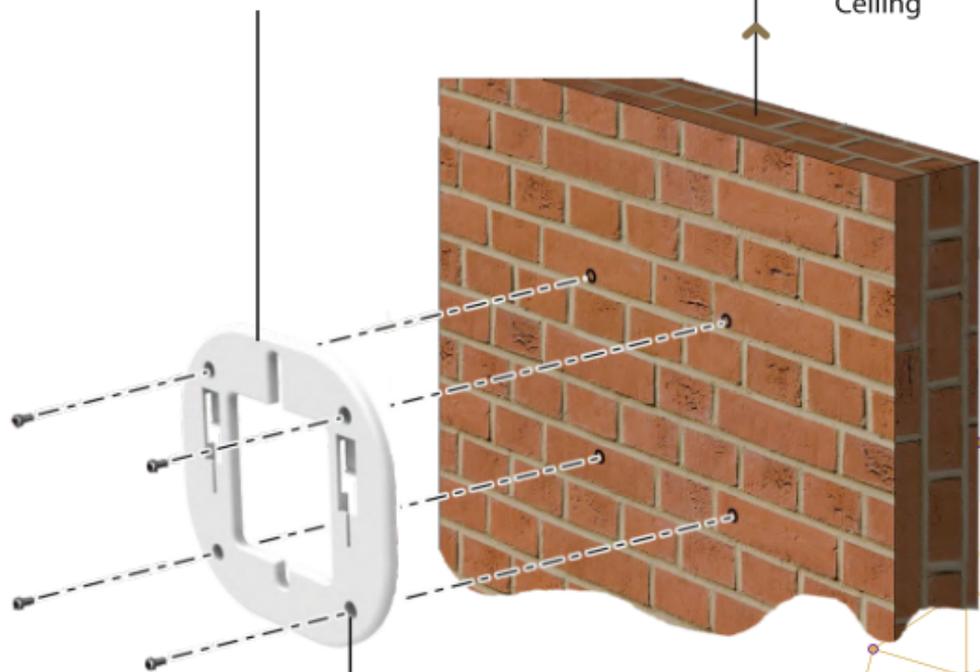


Holes in
Mounting Bracket
with supplied screws

3. Align the hooks of Access Point with the mounting slots of the mounting bracket and push the Access Point down

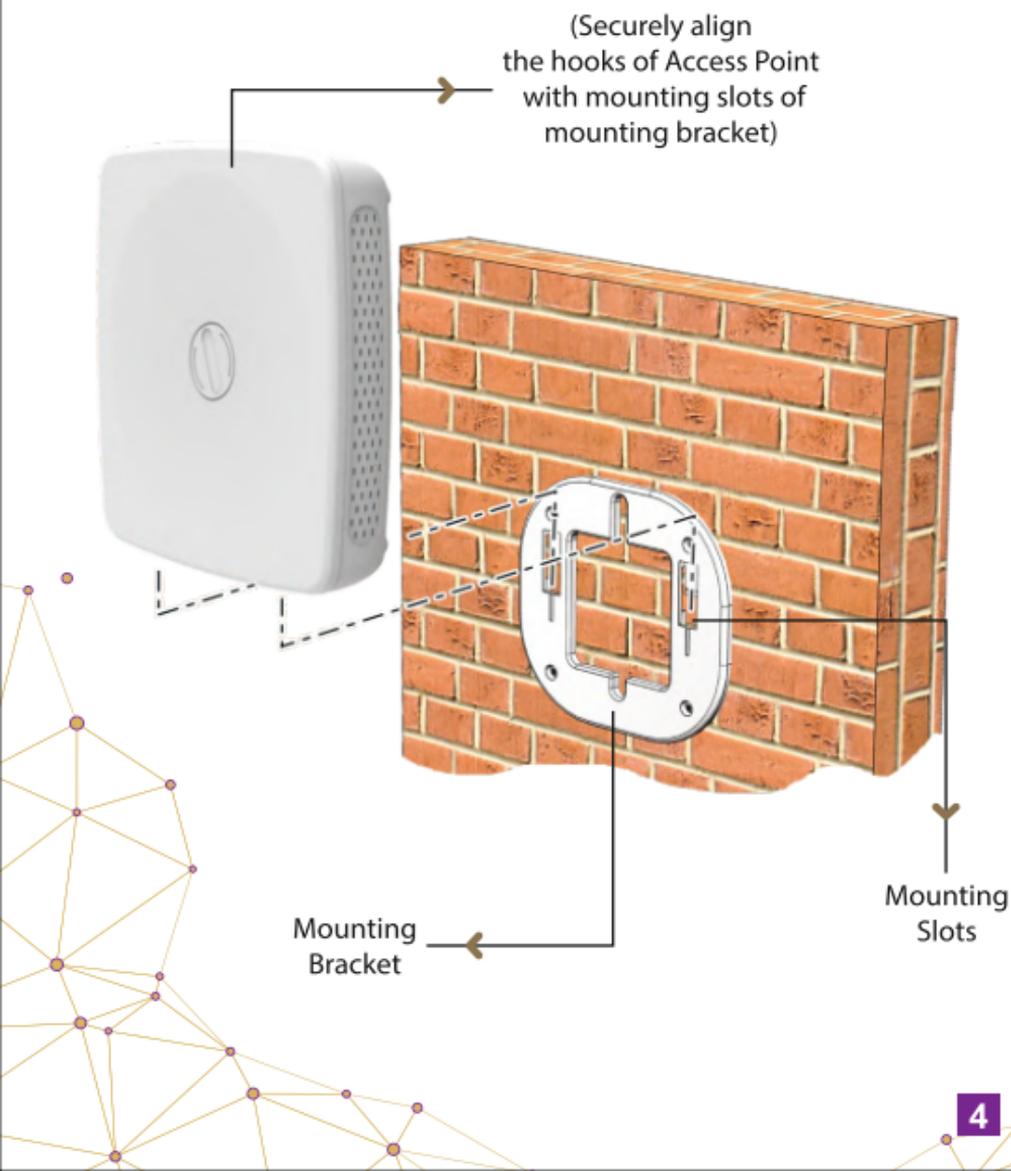

Unmounting of ion4i Access Point

1. Slide the hooks of the Access Point out from the mounting slots of mounting bracket.

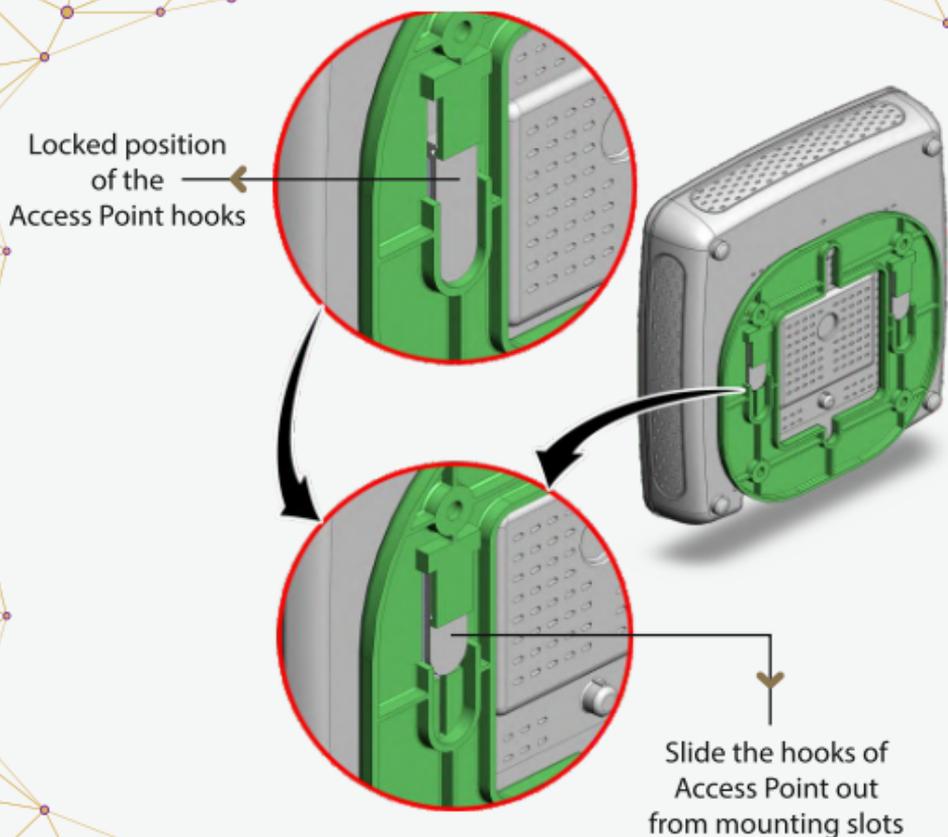


WARNING: Insecure mounting might damage the device or cause injury. IO is not responsible for damages incurred by insecure wall or ceiling mounting.

Getting the ion4i Online

Step 1: Power up

The Access Point is powered up using a PoE Adaptor. Use a Cat-5 ethernet cable and connect the LAN+PoE port of the Access Point with the PoE port of PoE adaptor as shown below:

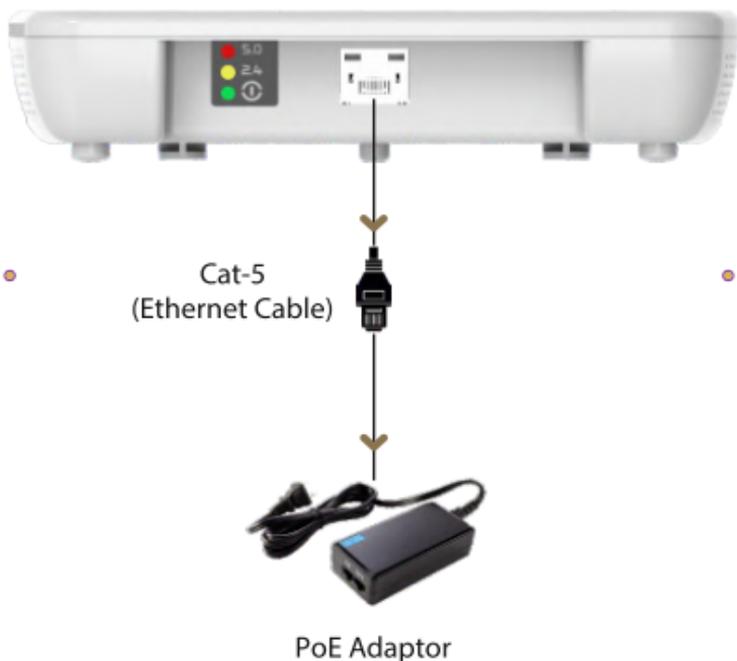

Note: The Reset button serves two functions:


Restart: Press and release the Reset button quickly.

Restore to Factory Default Settings: Press and hold the Reset button for more than five seconds.


Step 2: Connect to the network

Power up the device and follow the steps mentioned below to connect the Access Point with a network through GUI:

1. Connect an Ethernet cable to the computer.
2. Connect the other end of the Ethernet cable to the data port on the PoE adaptor.

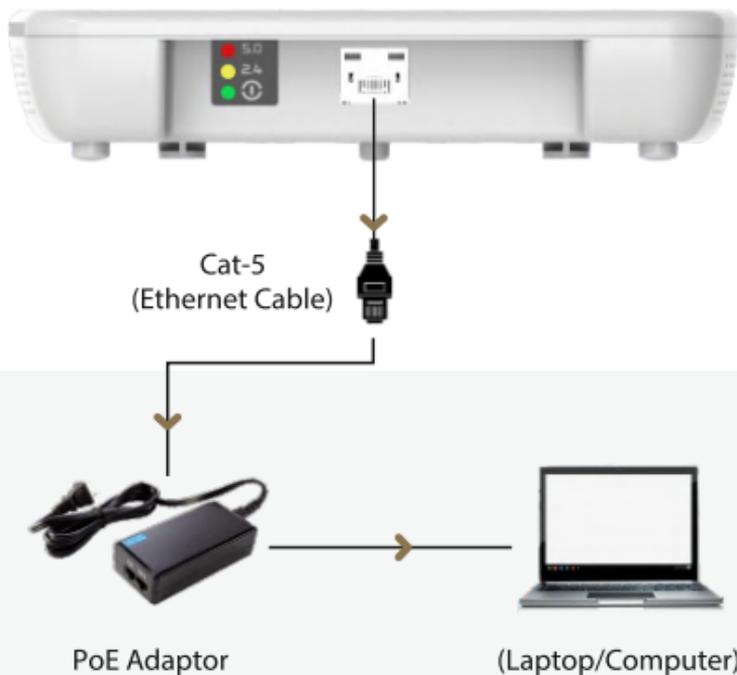


3. Open the web browser and enter the Access Point static IP address in the address bar: 192.168.1.1
4. A login screen will appear.

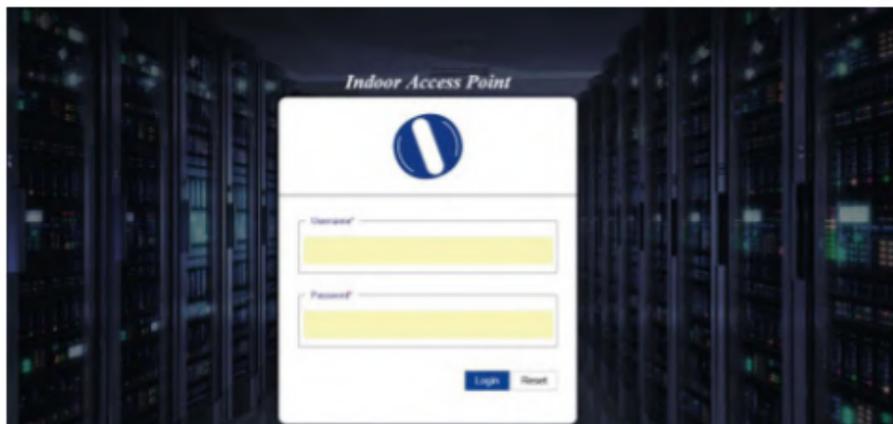

5. Enter the default login credentials as provided with your ion4i Access Point.

NOTE: Refer the respective user manual on our website io.hfcl.com for detailed information on GUI features.

Step 3: Check the LED status

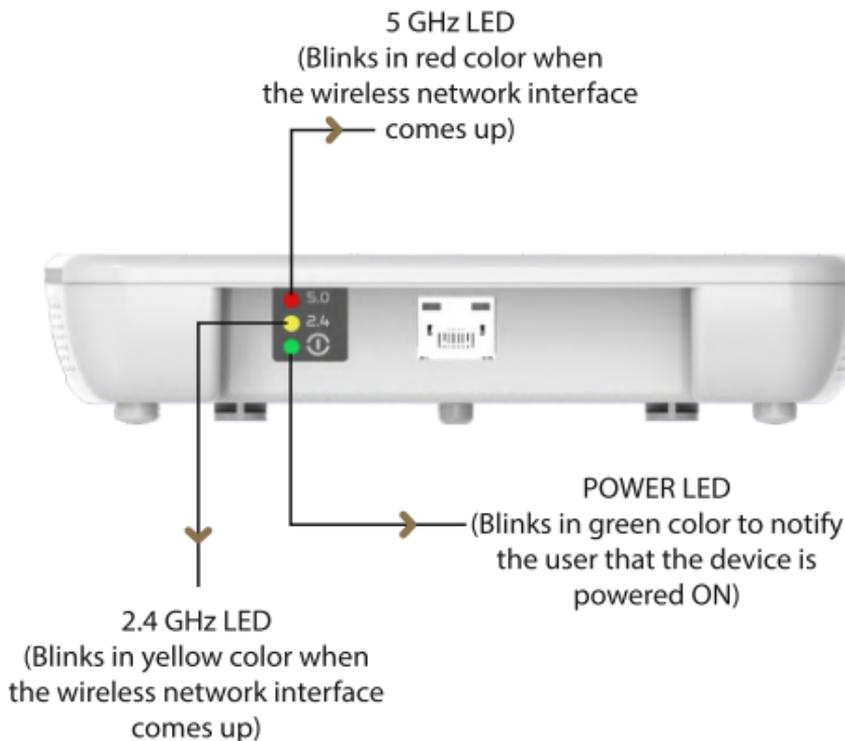

Observe the following safety precautions to avoid damage to the ion4i Access Point:

1. Do not subject the device to high temperatures.
2. Keep away from high voltage cables.
3. Disconnect the device before cleaning it.
4. Do not wipe the device with a damp cloth.
5. Do not open the enclosure of the Access Point.
6. Fasten the device tightly with the mount.



by HFCL

Contact us:

Email: iosupport@hfcl.com

Website: www.hfcl.com

www.io.hfcl.com

8, Commercial Complex, Masjid Moth
Greater Kailash-II, New Delhi-110048